



Removing and installing radiator cowl

Removing

- Remove air cleaner housing →Rep. gr.24.

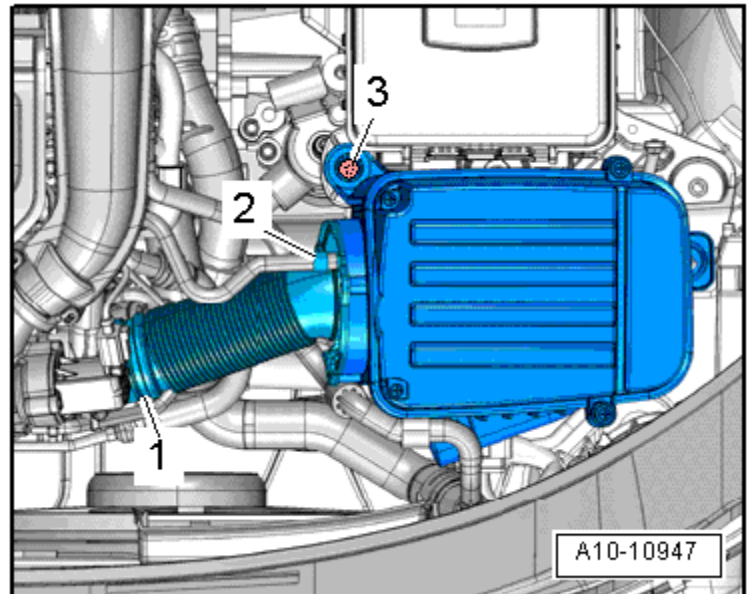

- Remove noise insulation →Rep. gr.50.

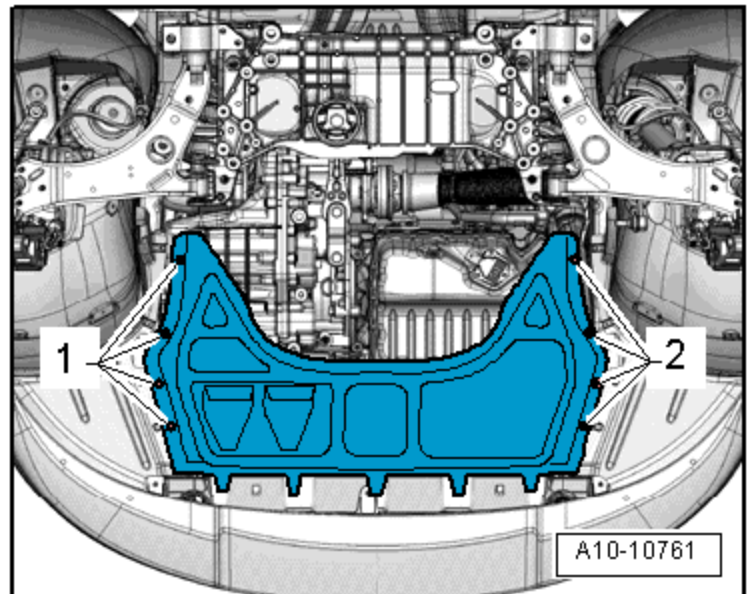



WARNING

Risk of injury as the radiator fans may start up automatically.

Unplug electrical connectors before performing work on radiator cowl.

- Detach electrical connectors -1- for radiator fans at bottom of radiator cowl.
- Unscrew bolts -arrows- and remove radiator cowl with radiator fans from below.

Installing

- Tightening torque → [Chapter](#)

Installation is carried out in the reverse order; note the following:

- Install noise insulation → [Rep. gr.66.](#)
- Install air cleaner housing → [Rep. gr.24.](#)

