

Removing and installing housing for exterior mirror - vehicles up to 05.2009

Removing

- Remove mirror glass → [Chapter](#).



Note

Mask the area around the mirror housing with a soft cloth to protect the paintwork.

- Remove bolts -4- and -5-.
- Release retaining tabs -3- in direction of -arrow A-.
- Release retaining clip -1- and detach exterior mirror housing from cover -2--arrows B-.
- Press mirror adjustment unit down and pull exterior mirror housing up.
- Unplug electrical connector for turn signal repeater.
- Detach turn signal repeater from exterior mirror housing → [Rep. gr.94](#).

Installing

- 1 Tightening torque → [Chapter](#)

Install in reverse order of removal.

